

## Operation Manual



1. When powered up you should see destination 001.
2. On the controller unit press the upper right hand button that has an image of three pages.
3. This will display options under the F1, F2, F3, and F4 buttons.
4. You should then see a destination Option under F3.
5. If not keep pressing the upper right button to change the options until you are able to see destination under the F3 button.
6. After selecting F3, press the up and down arrows located on the bottom of the controller to scroll through the destination options.
7. You should at this time see a destination number at the top and a brief description of what that destination includes.
8. To select a destination, put the destination number you want on the screen and press the green checkmark button to select.
9. To change from that destination to another just go back to step two and continue.
10. If at any time you select the wrong option or just want to get back to the home display, just keep selecting the red X button. (May take 2 or 3 clicks depending on where you are at.
11. If there are **numerous destinations** between the destination that you are on and the one you want to display you may jump directly to the destinations number rather than having to scan threw them all. Instead of using the up and down arrows in step 6, after selecting f3 (destination) press the right arrow. This will allow you to change each of the three digits going left to right individually using the up, down, and right arrows, making it simple to go from destination 002 to destination 106.